



An **ALLSOP** Family Brand
PO Box 23, Bellingham, WA 98227
PH 800-426-4303
www.allsop.com

ALLSOP Europe Limited,
Industrial Park, Waterford, Ireland
PH 353-51-355091
www.allsop.eu

For more information visit
www.clingo.com

universal parabolic sound sphere™

universal media dock



**USER
GUIDE**
PLEASE READ
PRIOR TO USE

SETUP

MOBILE DEVICE INSTALLATION

Step 1: Remove the protective film from Clingo pad.

Step 2: *This step is only for brand new Clingo Parabolic Sound Spheres.* Press your device firmly onto the new Clingo pad. Immediately remove the device. If when removing device you find it too difficult, simply touch the Clingo gel pad to your shirt or pants until desired stickiness is reached.


Step 3: Check Clingo pad for cleanliness and stickiness before each use. Product will not stick properly if the pad is not cleaned suitably. See PROPER CARE & CLEANING for instructions. Cleaning frequency may vary by environment.

Step 4: Wipe dirt and dust from your mobile device. Now attach it firmly to the Clingo pad. **DO NOT** attach your mobile device to the Clingo pad if it is protected by a leather or silicone case. The Clingo pad **WILL NOT** stick to leather or silicone.

Step 5: Charging cord for mobile device may be inserted through the hole at the back and through the center post of the Parabolic Sound Sphere.

REMOVING MOBILE DEVICE

Wrap your hand around the mobile device and while holding the back of your device (battery cover) with your finger tips, gently peel the mobile device from the Clingo pad from one side to the other (**diagram 1**).

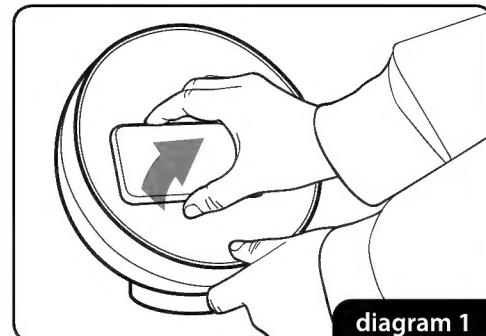

PROPER CARE & CLEANING

Proper care and use of the product is necessary to maintain optimal stickiness on Clingo pad.

FOR BEST CLINGO PAD CLEANING RESULTS

Step 1: Always remove your mobile device from the Clingo pad before cleaning.

Step 2: Remove the gray center post by gently pulling it away from the Parabolic Sound Sphere.

Step 3: Run warm water with mild soap over Clingo pad and use fingers to remove dirt and dust. **DO NOT** use solvents to clean the Clingo pad.

Step 4: Let the Clingo pad air dry completely before using. The Clingo pad **WILL NOT** stick when wet.

Step 5: Insert the gray center post back into the Parabolic Sound Sphere. Once inserted, gently twist it until you feel it sink further into the center of the Parabolic Sound Sphere – this ensures it is properly reattached.

FOR QUICK CLEANING

For quick cleaning, use a damp, lint-free wipe or cloth (i.e. chamois) to remove dust, dirt and oil from Clingo pad or simply rinse with water and let it air dry (**diagram 2**). **DO NOT** use any paper products to wash or dry your Clingo product.

CLINGO PAD

The Clingo pad is permanently bonded to the Parabolic Sound Sphere. Do not attempt to remove the Clingo pad.



* SAFETY PRECAUTIONS

Allsop, Inc. and its subsidiaries are not responsible for any damages caused to your devices due to improper installation, misuse, failure to comply with proper care instructions, or use of this product.